

Water ingress to the caliper's sensor will cause irregular readings on the dash and/or sensor testing unit. This can also cause corrosion and prevent the caliper from functioning properly. When replacing the brake caliper, inspect the vehicle's sensor connector for signs of a damaged o-ring.



A few drops of water within the caliper can cause faulty sensor readings and form rust on the internal components.

View Inside the sensor cover

The most common water entrance point to an ADB caliper's sensor is the vehicle's wiring connector o-ring. Carefully examine the sensor and connector for corrosion or signs of moisture.



has entered the sensor cover, replace the ADB Caliper.

For complete installation instructions and ADB caliper maintenance tips, visit www.WebbADB.com 💈



Corrosion behind sensor cover from water intrusion