


SERVICE BULLETIN #96


7/31/07

Drum Mounting


For correct drum mounting, drums must be sitting on drum pilots and flush to hub flange. See illustrations below. Incorrectly mounted brake drums are often mistaken for "out of round" and may develop into hard spots, cracks, or loose wheel ends.


FRONT HUBS

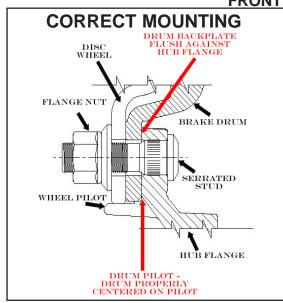

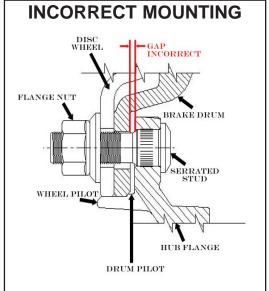

REAR/TRAILER HUBS

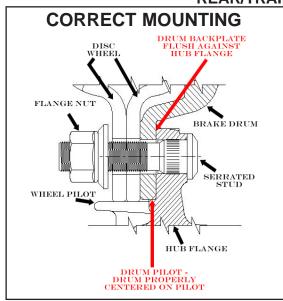

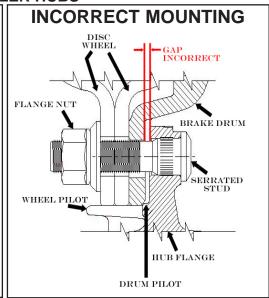

If you have any questions regarding this bulletin, please contact technical service at (256) 775-7514 or engineering@webbwheel.com.